

如影 S 相机兼容列表

品牌	系列型号	控制功能	兼容镜头
Canon	1D 系列	开始/停止录像 拍摄照片	EF 8-15 mm f/4L USM EF 11-24 mm f/4L USM EF 16-35 mm f/2.8L III USM EF 16-35 mm f/4L IS USM EF 17-40 mm f/4L USM EF 24-70 mm f/2.8L II USM EF 24-70 mm f/4L IS USM EF 24-105 mm f/4L IS II USM EF 24-105 mm f/3.5-5.6 IS STM EF 35 mm f/1.4L II USM EF 50 mm f/1.2L USM EF 85 mm f/1.2L II USM EF 85 mm f/1.4L IS USM EF 85 mm f/1.8 USM
	5D 系列		
	6D 系列		
	7D 系列		
Panasonic	GH5/GH5s	开始/停止录像 拍摄照片 电控跟焦	H-E08018GK H-HSA35100GK H-HSA12035GK FSA45200GK H-ES12060GK H-X012GK H-FS12060GK H-H025GK H-X015GK H-HS030GK
	GH4	开始/停止录像 拍摄照片	
Nikon	D850	开始/停止录像 拍摄照片	AF-S NIKKOR 14-24 mm f/2.8G ED AF-S NIKKOR 16-35 mm f/4G ED VR AF-S Zoom-Nikkor 17-35 mm f/2.8D IF-ED AF-S NIKKOR 18-35 mm f/3.5-4.5G ED AF-S NIKKOR 24-70 mm f/2.8E ED VR AF-S NIKKOR 24-70 mm f/2.8G ED AF Zoom-Nikkor 24-85 mm f/2.8-4D IF AF-S NIKKOR 24-85 mm f/3.5-4.5G ED VR AF-S NIKKOR 24-120 mm f/4G ED VR AF-S NIKKOR 28-300 mm f/3.5-5.6G ED VR AF NIKKOR 14 mm f/2.8D ED AF-S NIKKOR 20 mm f/1.8G ED AF-S NIKKOR 24 mm f/1.4G ED AF-S NIKKOR 24 mm f/1.8G ED AF-S NIKKOR 50 mm f/1.4G AF-S NIKKOR 85 mm f/1.4G AF-S NIKKOR 85 mm f/1.8G
	D5		
	D3		
	D300		
	D300S		
	D3S		
	D3X		
	D4		
	D4S		
	D500		
	D5000		
	D5100		
	D5200		
	D5300		
	D5500		
	D600		
	D610		
	D700		
	D7000		
	D7100		
D7200			
D750			
D800			
D810			
D810A			
D90			
Df			
Sony	A7 系列	开始/停止录像 拍摄照片	FE 24-105 mm F4 G OSS FE 16-35 mm F2.8 GM FE 12-24 mm F4 G FE 100 mm F2.8 STF GM OSS FE 85 mm F1.8 Vario-Tessar T* FE 16-35 mm F4 ZA OSS FE 24-70 mm F2.8 GM Vario-Tessar T* FE 24-70 mm F4 ZA OSS FE 28-70 mm F3.5-5.6 OSS FE 28 mm F2 Distagon T* FE 35 mm F1.4 ZA Sonnar T* FE 35 mm F2.8 ZA Planar T* FE 50 mm F1.4 ZA FE 50 mm F1.8 Sonnar® T* FE 55 mm F1.8 ZA FE 85 mm F1.4 GM FE 90 mm F2.8 Macro G OSS
	A9 系列		
	A6000/A6300/A6500		
Hasselblad	X1D	XCD 4/21 mm XCD 3.5/120 mm XCD 3.2/90 mm XCD 3.5/45 mm XCD 3.5/30 mm	